




E'2c/Classic Tempest



E'2c/Classic Earth



280 mm (11 in)

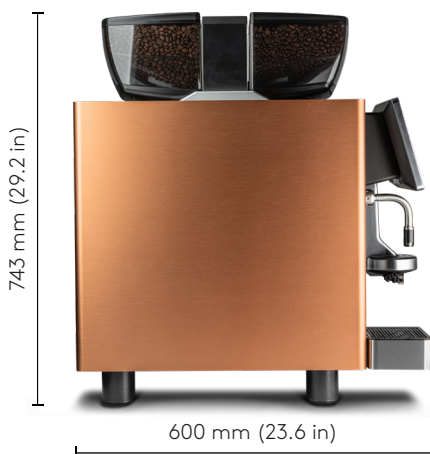

743 mm (29.2 in)

600 mm (23.6 in)

TECHNICAL DATA

Weight	52 kg (114.6 lbs)
Brew chamber	1 x 24 g (1 x 0.05 lb)
Grinder	2 x Grinders (Ø 64 mm (2.5 in) burrs)
Display	1 x Touch screen 256 mm (10.1") - 1280 x 800 px
Bean hopper	2 x 1.5 kg (2 x 3.5 lbs)
Coffee outlet height*	Max. 190 mm (7.5 in)
Hot water outlet height*	Max. 160 mm (6.3 in) or Max. 215 mm (8.5 in) (option)
Interfaces	2 x USB, 1 x Ethernet, 1 x CCI/CSI
Cup heater surface	-
Coffee boiler	1 x 1.5 L (1 x 50.7 oz)
Steam boiler	-
Grounds drawer	1 x 700 g (1 x 1.54 lbs)
Drip tray	Standard

*measured from the drip tray

OPERATING CONDITIONS

Operating Temperature	10 to 32 °C (50 to 90 °F)
Storage & transport temperature (empty boiler)	10 to 50 °C (50 to 122 °F)
Long term storage (> 6 months) (empty boiler)	5 to 50 °C (41 to 122 °F)
Relative Humidity (RH), no condensing (storage, transport and operating)	5 to 80 % RH
Transient over-voltage	Category II

PERFORMANCE (UP TO)

Espresso/h (extraction time: 23 s)	175
Hot water/h (200 ml or 6.8 oz)	170
Cappuccino/h (extraction time: 23 s)	-
Adjustable hot water temperature (Manual)	-
Adjustable hot water temperature (Automatic)	-
Everfoam (eFoam)	-
Milk system with EMT (Electronic Milk Texturing)	-

Coffee cannot be dispensed at the same time as hot water.

WATER REQUIREMENTS

Total hardness	5 to 8° dGH (89 to 142 ppm)
Carbonate hardness	Max. 6° dKH (107 ppm)
pH value	Ideal 7.0 to 7.2
Chlorine value	Max. 0.1 mg/L (0.1 ppm)
Inlet hose	Inox braided pipe G3/8" female x 2 m (78.7 in)
Drain hose	Ø 22 mm x Ø 16 mm x 2 m (0.9 x 0.6 x 78.7 in)
Siphon inlet	min. Ø 56 mm (2.2")
Pressure	2.5 to 4 bar (36.3 to 58 psi) If the pressure exceeds 4 bar (58 psi), it is necessary to install a pressure reducer.
Flow rate	To avoid damage to the water pump, a water flow rate of at least 150 l/h (2.5 l/min) (5072 oz/h (84.5 oz/min)) must be ensured at the water inlet of the machine.

GENERAL INFORMATION

Power consumption (standby mode)	Less than 2 W
----------------------------------	---------------

ENIGMA CLASSIC**China****E'2c**

1/N/PE, 220-240V~, 50/60Hz, 16A	2800 W
---------------------------------	--------

Korea**E'2c**

1/N/PE, 220V~, 60Hz, 16A	2600 W
--------------------------	--------

Japan**E'2c**

2/PE, 200V~, 50/60Hz, 12A	2100 W
---------------------------	--------

Israel**E'2c**

1/N/PE, 220-240V~, 50/60Hz, 16A	2800 W
---------------------------------	--------

Rest of the world (Europe)**E'2c**

1/N/PE, 220-240V~, 50/60Hz, 16A	2800 W
---------------------------------	--------

United Kingdom (UK)**E'2c**

1/N/PE, 220-240V~, 50/60Hz, 16A	2800 W
---------------------------------	--------

IMPORTANCE OF THE SAFETY INSTRUCTIONS

In order to prevent accidents to persons, damage to equipment or pollution of the environment, you must comply with all the safety instructions in the manual and on the machine.

Observe the bylaws and the recognized technical rules which apply in the country of use of the machines.


It is imperative to read the Eversys General Safety Instructions (supplied with the machine) before carrying out any action on the machine. In case of unclear information, please contact your local service organization.

PREPARATORY WORK

- Have a flat and clean surface.
- Get a clean environment.
- Keep a space of min. 250 mm (9.8 in) above the machine.
- A stable support capable of supporting the weight of the machine plus an additional weight of 5 kg (11 lbs) including coffee beans, water, etc.
- Have a table height of at least 800 mm (31.5 in).
- Have a separate power lines for each machine.
- Have an electrical network protected by an RCD or RCCB.
- Water mains shutoff valve with a non-return valve (type EA or according to local regulation).
- Descaling cartridge or carbon filter as minimum.
- Install the machine with adequate backflow protection, in accordance with applicable federal, state or local plumbing codes.

INSTALLATION

Install the machine in accordance with the manufacturer's training and the information on the [installation sheet](#) supplied with the machine. Below you'll find a quick overview of how to connect the machine (drain, water and milk supply).

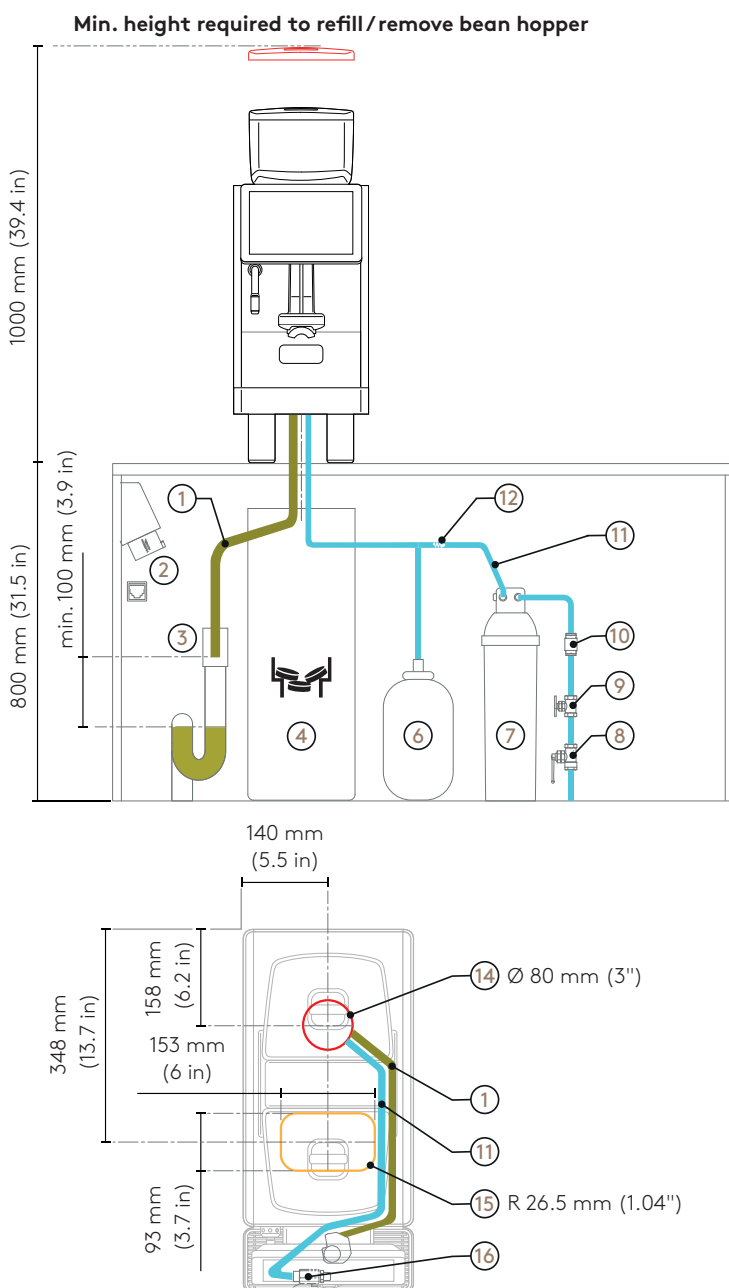

1. Drain hose - **Make sure that the drain hose outlet is placed on the siphon but not in contact with waste water. The hose must always flow downwards.**
2. Electrical socket according to local regulation and RJ-45 connection (e'Connect).
3. Drain with siphon, input min. Ø 56 mm (2.2''). Execution according to EN 61770.
4. Undercounter grounds coffee disposal (option).
5. -
6. Pre-charged 2 bar expansion tank (option). In the event of a temporary drop in water pressure below 2 bar (29 psi).
7. Descaling cartridge or carbon filter as minimum.
8. Main water tap (required).
9. Pressure reducer (option). If water pressure exceeds 4 bar (58 psi).
10. Check valve according to local regulation.
11. Water supply hose G3/8" female.
12. Check valve (option). If using an expansion tank (6).
13. -
14. Countertop cutout for cables and hoses.
15. Countertop cutout for the undercounter ground coffee disposal (option).
16. Machine water inlet 3/8".

AFTER INSTALLATION

Explain to staff how to use and clean the machine, using the [quick-start guide](#) and [cleaning sheet](#) supplied with the machine.

To start the Eversys warranty period, please follow the instructions at the end of the installation wizard, or connect the machine to telemetry for a fully automated warranty start.

Your local distributor:

